









#### General Information

This is an easy-to-use 8-digit calculator that operates many hours on a single battery.

To turn the calculator on, press the **ON** key.

To turn the calculator off, press the **OFF** key.  
The calculator turns off automatically after several minutes of nonuse.

To clear the calculator without affecting the memory, press **CE/C** twice.

To clear an incorrect number entry, press **CE/C** once to clear the display. You can then enter the correct number.

F/N20014